



W292S4498 Hillside Rd. Waukesha, WI 53189
262-896-6780 Fax 262-896-6756
www.midwestindustriesinc.com

MI-MP5TR/MI-MP5KTR & MI-MP5TR-G2/MI-MP5KTR-G2 Instructions
(Failure to read and follow these instructions will void your warranty)

1. Please make sure your firearm is unloaded and pointed in a safe direction.
2. Set the mount on top of your rifle or pistol. The fork portion goes around the front sight post and the relieved area in the top of the mount fits in the tabs on the top of the receiver.
3. Install the provided clamps one at a time. The beveled edge goes towards the gun with the 45-degree angle going towards the floor. You may have to orientate the clamps differently depending on the gun you have. Install all four screws, use long screws if necessary, and use the provided blue thread lock. Finger tighten only.
4. Torque the four socket heads to 20-inch pounds.
5. Install the front set screw with thread lock and torque to 10-inch pounds.



W292S4498 Hillside Rd. Waukesha, WI 53189
262-896-6780 Fax 262-896-6756
www.midwestindustriesinc.com

MI-MP5TR/MI-MP5KTR & MI-MP5TR-G2/MI-MP5KTR-G2 Instructions
(Failure to read and follow these instructions will void your warranty)

6. Please make sure your firearm is unloaded and pointed in a safe direction.
7. Set the mount on top of your rifle or pistol. The fork portion goes around the front sight post and the relieved area in the top of the mount fits in the tabs on the top of the receiver.
8. Install the provided clamps one at a time. The beveled edge goes towards the gun with the 45-degree angle going towards the floor. You may have to orientate the clamps differently depending on the gun you have. Install all four screws, use long screws if necessary, and use the provided blue thread lock. Finger tighten only.
9. Torque the four socket heads to 20-inch pounds.
10. Install the front set screw with thread lock and torque to 10-inch pounds.

